



Sound Bar Fitting Instructions


Fitting the Soundbar

What you should have

- Soundbar
- Mounting bracket
- 2 x M5 screws, nuts and washers
- 2 x #8 self tapping screws
- 2 x Connecting cables
- Philips-head screwdriver (not supplied)

Where to fit the Soundbar

The Soundbar box can be fitted to the lower edge of the panel.

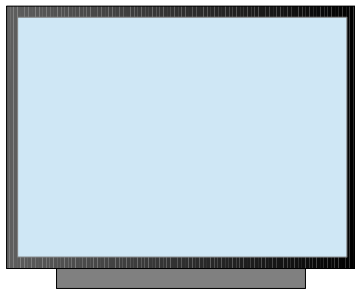


Installing it on the upper edge is unconventional but will allow the sound to project further in a classroom, for example.

How to fit the bracket

The edge of the bracket with the ten holes is fixed to the frame of the screen as shown below. The ten holes allow the same bracket to be fitted to 60", 75", 80", 85" and 90" Classic models.


Remove two M4 screws under the bottom edge as shown.

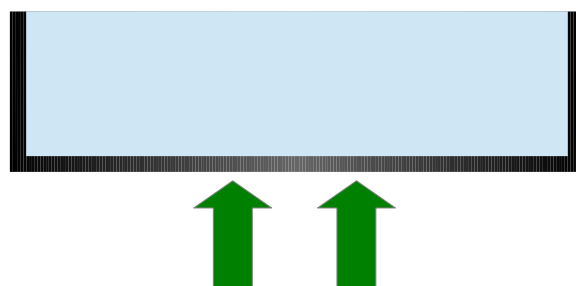



Fit the supplied self-tapping screws to replace M4 screws removed in the first step. Tighten firmly, but do not over-tighten as you could strip the internal thread in the panel.

Fitting the Soundbar to the bracket and connecting it to the panel

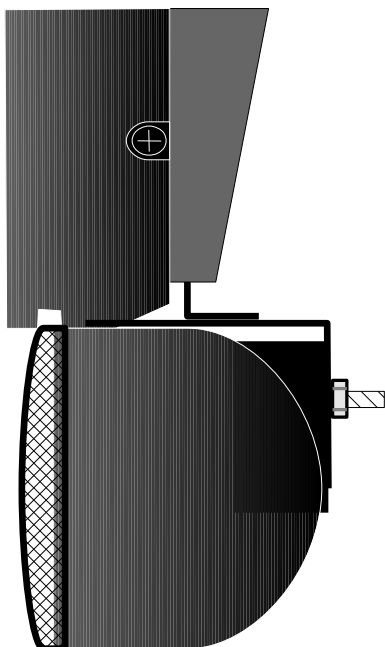

Fit the heads of the supplied M5 screws together with the star washers to the keyhole slots in the soundbar fixing feet.

Pass the threaded ends of the screws through the matching holes in the mounting bracket and fit the two M5 wingnuts and flat washers.

Tighten the wingnuts so that the edge of the soundbar engages with the groove in the panel's surround.

Using the supplied cables, connect the soundbar to the SPEAKER OUT terminals on the panel.

CommBox Pty Ltd
CommBox Pty Ltd, PO Box 6667, Frenchs Forest NSW 2086,
Tel: (02) 9975 6001 | info@commbox.com.au

commBOX.com.au